 
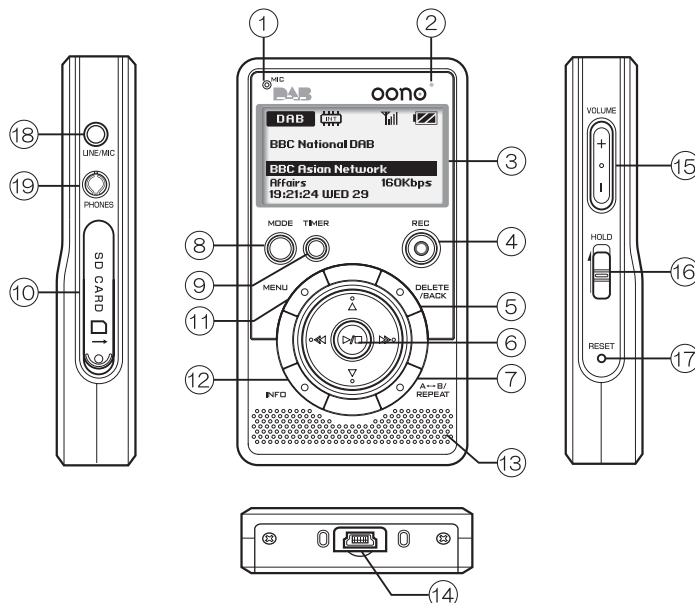 


QUICK START GUIDE


MiniDAB MD-ONE

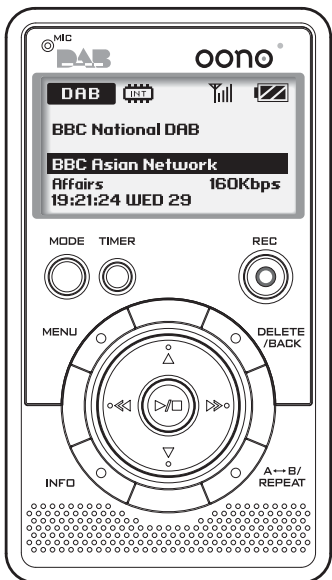

1	Internal Microphone	11	MENU
2	LED	12	INFO
3	LCD	13	External Speaker
4	REC	14	USB/POWER Terminal
5	DELETE/BACK	15	Volume +/-
6	POWER ON/OFF	16	HOLD
7	A↔B/Repeat	17	RESET
8	MODE	18	LINE IN
9	TIMER	19	Earphone Jack
10	SD/MMC Card Slot		

2 GETTING STARTED

Before using the MiniDAB the battery needs to be fully charged. You can charge the battery using the AC adaptor provided, or by attaching the MiniDAB to a PC via the USB connection. Using the AC adaptor is the quickest method and should take approximately 4 hours.

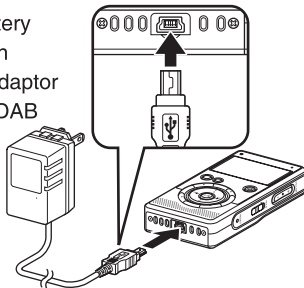


To switch the MiniDAB on press the ►/■ button and hold down for 1-2 seconds.



☞ If the HOLD switch is in the ON position, all the buttons are disabled - including the ►/■ button to switch the MiniDAB on. In this case, slide the HOLD switch to the off position and try again.

3 USING A MEMORY CARD

When inserting a memory card into the MiniDAB, take care to ensure it is inserted properly, as shown in the diagram (pay particular attention to which way round it goes). Otherwise you may damage the card and/or the card slot.

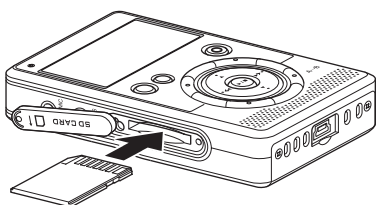

☞ You may need to format the memory card to the FAT file system prior to using it. Please refer to the manual for more information.

1 GUIDE TO THE OONO MINIDAB

4 USING THE FUNCTIONS

•The MiniDAB has four modes for use, DAB, FM, MUSIC and VOICE. To select a mode use the MODE button.

•To switch between modes press the MODE button repeatedly until the required mode has been found.

DAB MODE

There are three ways to tune the DAB Radio Autotune Local, Autotune Full and Manual Tune. These can be accessed from the DAB menu.

While in DAB mode press the menu button.

Using ▲ or ▼ (up/down) select the type of tuning you want to use, then push the ►/■ (PLAY) button to confirm.



MUSIC MODE

Using ▲ or ▼ (up/down) select the music folder you want to play, then push the ►/■ (PLAY) button to start playing the music in that folder.

To play an individual tune use the ▲ or ▼ (up/down) to select the file you want to play, then push the ►/■ (PLAY) button to begin playing.


VOICE MODE

In VOICE mode you can create a number of voice recordings. See the ONE TOUCH RECORDING section for more.

Press the MENU button  & select SYSTEM using the ◀ or ▶ (left/right) buttons.

Select TIME SET using the ▲ or ▼ (up/down), then press the ▶/■ (PLAY) button.

You should now see a similar screen to the one shown below:

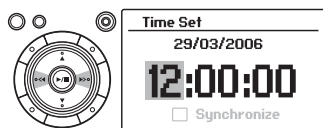

To change the Hour/Minute, use the ▲ or ▼ (up/down). To move between Hour/Minute fields, use ◀ or ▶ (left/right). Push ▶/■ (PLAY) to confirm and finish.

Press the MENU button  & select SYSTEM using the ◀ or ▶ (left/right) buttons.

Select CALENDAR using ▲ or ▼ (up/down) and push ▶/■ (PLAY). You will see a screen similar to the one below:


To move between the Year/Month/Date, use ◀ or ▶ (left/right). Push ▶/■ (PLAY) to confirm and finish.



☞ Make sure you always have enough battery power. After 1 or 2 hours of the battery being fully discharged the year/day/hour settings are all lost and must be set again.


• You can program the MiniDAB to automatically record radio broadcasts via a daily or weekly timer function: totally unattended.

Press the TIMER button and hold down to initiate the timer recording screen.

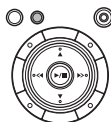


☞ You cannot set a timer recording when the unit is playing back a file, recording or in the menu mode.


You will see a screen similar to this screen (see right)

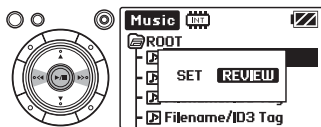

Select SET by using ◀ or ▶ (left/right) buttons, then press the ▶/■ (PLAY) button.

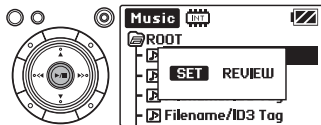

Select a Timer Schedule Slot (1-20) using ◀ or ▶ (left/right) buttons.

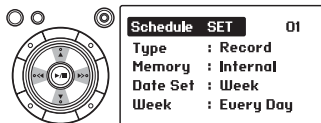

Work through the list of Timer settings using ◀ or ▶ (left/right) to select a setting, use ▲ or ▼ (up/down) to move through the settings.

Press the ▶/■ button to finish.

Use ◀ or ▶ (left/right) to select SAVE.

Press the ▶/■ button to confirm.


☞ In order for timer recording to function properly, the correct time and date MUST be set.

• Any files created using the MiniDAB will be encoded as MP3 files.


• One touch recording can be used in FM Mode, DAB Mode and VOICE mode.

Select the mode in which you want to record.

Press the record button and a recording symbol will be displayed on screen (as shown).

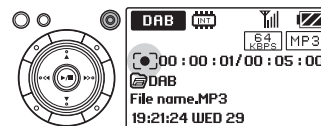

To pause the recording, press the record button again. The PAUSE message will appear on screen as shown.

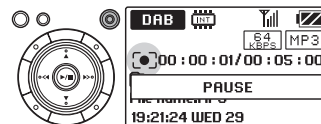

To resume recording from the PAUSE state, press the record button.

To stop recording, press the ▶/■ button.

☞ Recordings will automatically be saved into the designated folder

- DAB Radio recordings will be stored in the DAB folder
- FM Radio recordings will be stored in the FM folder
- Voice recordings will be stored in the MIC folder (found in MUSIC mode)

Thank you for purchasing the Oono MiniDAB, we hope you enjoy using this unit.

We ask that you take a few minutes to register your MiniDAB at www.oono.co.uk, this will not only validate your MiniDAB warranty but give you access to the latest updates and product downloads for your MiniDAB.

If you need any further information on how to operate the MiniDAB please refer to the MiniDAB manual. Alternatively go to www.oono.co.uk, our informative website has lots of information to help you with any difficulty you may experience with your MiniDAB.

